



A) Coupling

In order to connect the clutch to the anchor, the sphere is pushed with its opening facing downwards into the recess over the anchor. The latch of the sphere is then turned downwards

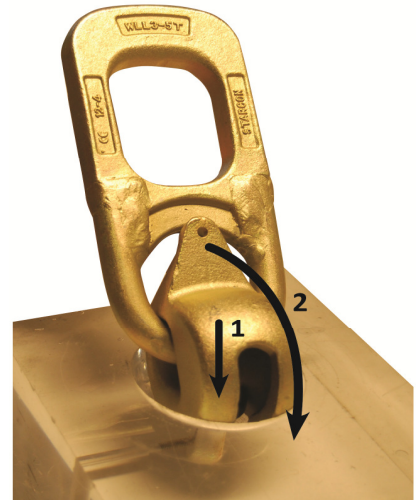

B) Lift

The precast element can be lifted. Tilting, turning and swivelling of the concrete unit in motion is permissible in any direction, except for the positions marked 'wrong' in the drawing above.

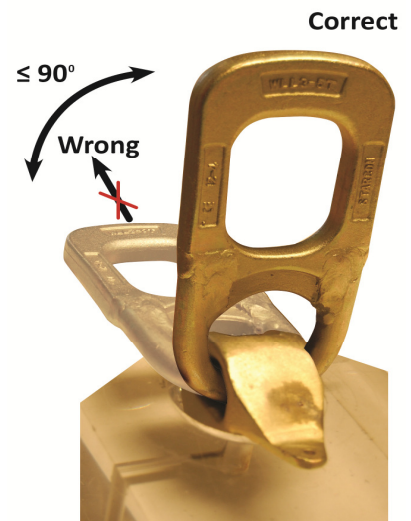

C) Release

To release, the load hook is lowered and the sphere turned up and out.

