




New overflow lead pipe (40mm diameter) travels through parapet and decorative stone block. New pipe welded to sump leadwork.

Carefully remove existing chute and overflow. Set aside, carefully clean existing iron hopper and pipe, and associated drainage. From new enlarged opening through wall above hopper to facilitate maintenance. Connect new pipe to rear of existing.

Carefully lift lead guttering and remove sump. Form new sump min. 200mm deep (as LSA detail) with welded spigot and overflow. Connect to new CI sealed pipe (Saint Gobain Ensign or equivalent) following existing route, connecting to chute.

Note
Schedule of works and specification to be read alongside drawings.

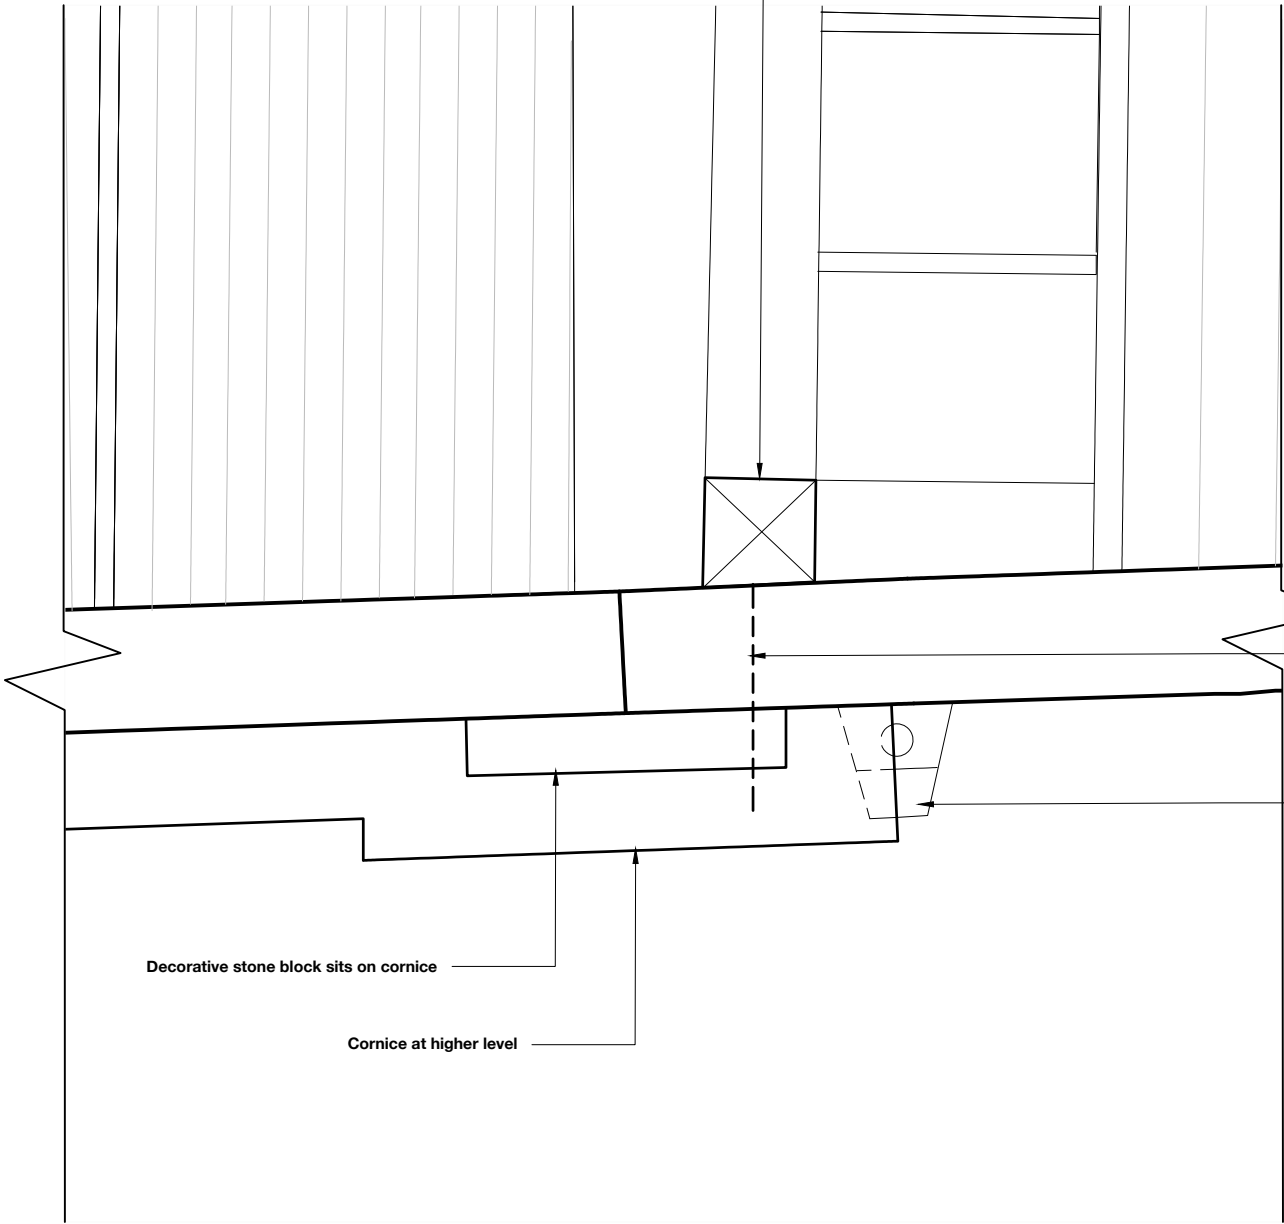

New overflow lead pipe (40mm diameter) travels through parapet and decorative stone block. New pipe welded to sump leadwork.

Carefully remove existing chute and overflow. Set aside, carefully clean existing iron hopper and pipe, and associated drainage. From new enlarged opening through wall above hopper to facilitate maintenance. Connect new pipe to rear of existing.

Decorative stone block sits on cornice

Cornice at higher level

Sketch of Proposed Drainage Solution

Plan of Proposed Drainage 1:20@A3

PROJECT	BURY FUSILIERS MUSEUM
JOB NUMBER	BUFM.01
DRAWING TITLE	ROOF AREA C - PROPOSED DRAINAGE SOLUTION

DRAWING STATUS	WORK IN PROGRESS
DRAWING NO.	C101
REVISION	-
SIZE & SCALE	AS STATED

© Chambers Conservation Ltd
jennifer@chambersconservation.com
rob@chambersconservation.com
07484 133270 or 07919 300428
www.chambersconservation.com

Registered in England and Wales, no. 09787239
Registered address: Mercury House, High St,
Tattenhall, Chester, CH3 9PX

Do not scale from this drawing unless agreed

